

INSTRUCTIONS

Accessory

CHROME FRONT LOWER COWL

P/N 08F81-MCA-101

GL1800


Application

Publications No.

Issue Date

February 2006

PARTS LIST

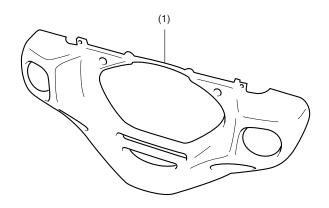


No.	Description	Q'ty
(1)	Chrome front lower cowl	1

INSTALLATION

NOTE:

- To prevent burns, allow the engine and cooling system to cool before installing the radiator cowl.
- 1. Remove the original front lower cowl as described in the Service Manual.

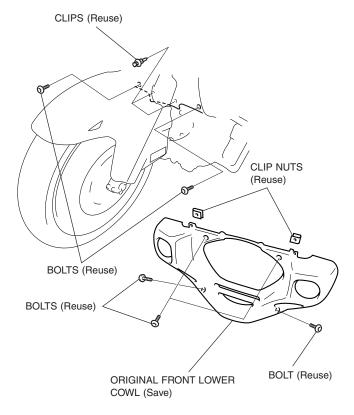

Install the chrome front lower cowl in the reverse order of removal.